



## Checking your license and registering your I-Mark



Get the most from your I-Mark system with an unlimited system. You can check your machine license and determine if it unlimited or needs to be registered. Here's how:

### Retrieve your Machine ID number:

1. Ensure the Controller is connected to the operator PC and powered on.
2. Open the I-Mark Software and connect to the Controller as though you were preparing to make a mark.
3. Click on "Diagnostics" and document the 8 character Machine ID. You will need to provide this on the registration form later.

Note: If there are remaining days on your license then registration is required.

The screenshot shows the I-Mark software interface. On the left is a navigation menu with options: Status and Control, Machine Activity, Diagnostics, Configuration, Log, Manual Control, Files, and Properties. The main window is titled 'Hardware Information' and contains a table with the following data:

Index	Name
0	X
1	Y

Below the table is an 'Edit' button. To the right of the table is a 'Versions' section with the following information:

Controller:	4.9.3.5
Hardware:	0x314
FPGA:	0x10A00046
Main Task:	2.5.005.000
Utility Task:	2.5.005.000
Machine ID:	1T3F-NH2X
License:	61 days

At the bottom of the window, there are tabs for 'System I/O', 'Counters', and 'Registers'. The 'System I/O' tab is active, showing an 'Input' section with a checkbox for 'Input0 (Start)'.

## Online Registration Form

[I-Mark Registration \(marking-machines.net\)](http://marking-machines.net)

Click the link above to access our online registration form and provide the requested information. The information will automatically be emailed to us at CMT. Allow one business day for a response.

If you have trouble clicking the link, you may also cut and paste [http://marking-machines.net/I-Mark\\_Registration.html](http://marking-machines.net/I-Mark_Registration.html) in your browser to reach the registration form.

Upon receiving your Registration info, CMT will verify your purchase and supply you with a permanent License Key.

1. With the Controller on and connected to the operator PC, return to "Diagnostics" in the I-Mark Software.
2. Click on "Update Key" in the System Actions group.
3. When the dialog window pops up, simply copy and paste the key CMT provided into the field and click "Submit."
4. The I-Mark software will do a soft reset of the Controller and be ready to use again.

Note: in some instances, when the Controller reconnects to the I-Mark software, the Machine ID will not be visible. Simply restart the I-Mark software and power cycle the controller to clear this error.

The screenshot shows the 'System Actions' menu in the I-Mark software. It contains the following buttons:

- Download Firmware
- Download Parameters
- Optimize File System
- Hardware Reboot
- Backup Machine Data
- Restore Machine Data
- Update Key
- Generate Machine Report
- Update Controller Version

The screenshot shows the 'Enter Key' dialog box. It has a title bar 'Enter Key' and a subtitle 'Enter your activation key'. Below the subtitle is a text input field containing the key 'N8616-TFN8B-BO10T-STBCD-H00'. At the bottom of the dialog are 'Cancel' and 'Submit' buttons.